 


Packet8®

Follow these easy steps and start calling and saving on your phone bill:

1. Install your UIP160P.
2. Activate your Packet8 account.
3. Make and receive calls with Packet8.

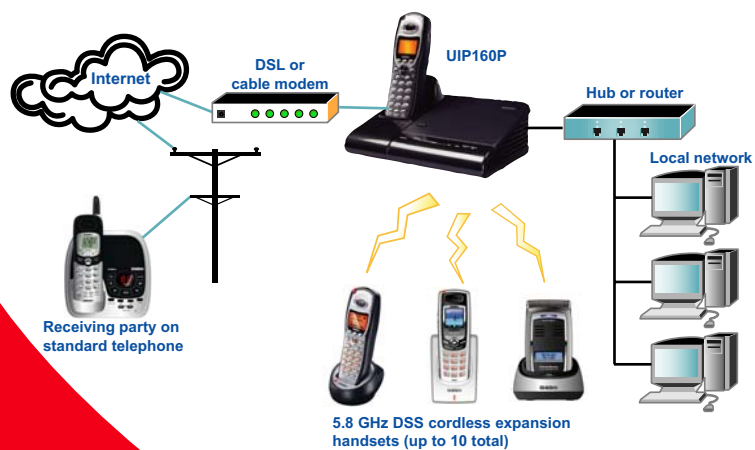

Your new Uniden UIP160P VoIP phone will only operate if you activate Packet8 service.

Quick Start Guide

This Quick Start Guide assumes you have the following items available:

- ▶ A broadband modem and an active broadband Internet service.
- ▶ A computer with an Ethernet port.
- ▶ A CAT-5 Ethernet cable (RJ-45).

Before You Start:

Visit the Packet8 activation website at <http://activate.packet.net> and enter the MAC address (a twelve-character code) found on the bottom of your UIP160P. After you activate the UIP160P, you will receive an email containing a 10-digit activation code. You will need this activation code in Step 5.


NOTE: If you ordered your UIP160P directly from Packet8, it will already be activated for you. Your 10-digit activation code was in the confirmation email you received when your UIP160P shipped. (If you don't have this email, go to www.packet8.net. At the account sign-in page, enter the email address and password you used to create the account.)

1 Check the package contents


- ▶ Make sure the package contains the following items:
 - UIP160P main base
 - Cordless handset
 - One AC power adapter
 - Rechargeable battery pack
 - One CAT-5 Ethernet cable (RJ-45)
 - Belt clip
 - Printed materials

2 Install and charge the handset battery pack


A Remove the cover.

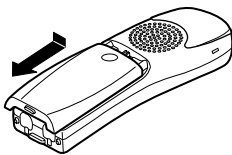

C Replace the cover.

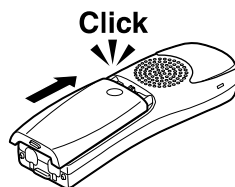


B Connect the battery pack, making sure to line up the red and black wires with the red and black markings near the jack.

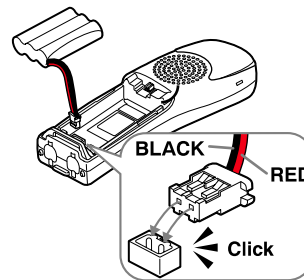

CAUTION: Use ONLY Uniden rechargeable battery pack BT-446!

D Charge the cordless handset.

- ▶ Use the AC adapter to connect the port labeled POWER to a 120 Vac continuous power outlet.
- ▶ Place the handset in the base. Make sure that the charge LED illuminates. Charge the handset for 15-20 hours.

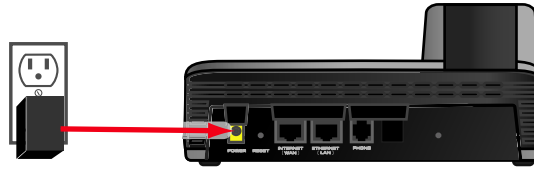


CAUTION: Use ONLY Uniden AC adapter AD-0009!

NOTE: Fully charge the handset battery pack before connecting to the Internet (WAN).

3 Connect the UIP160P to your network

- A** Use the included Ethernet cable to connect your broadband modem to the RJ-45 port labeled Internet/(WAN). (If you already have a router installed, you can connect the router to the Internet/(WAN) port instead.)

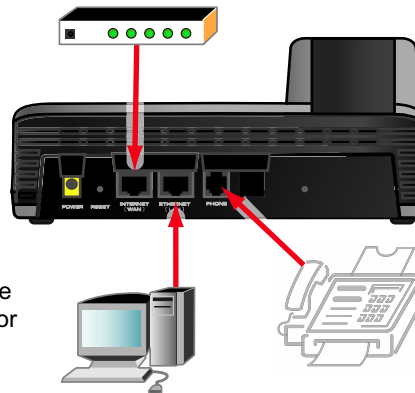

- B** Use a second Ethernet cable to connect your PC, router, or switch to the RJ-45 port labeled Ethernet/(LAN).

- C** If you want to share the line with another phone or FAX machine, use a telephone cord to connect a phone or FAX to the RJ-11 port labeled Phone.

CAUTION: Do not connect the UIP160P to a regular telephone wall jack.

- D** All the LEDs will flash three times, and the pwr LED remains on. The link LED should come back on in a few seconds.

4 Activate your Packet8 service

- A** Get the 10-digit activation code from Packet8's confirmation email. (If you don't have this email, go to www.packet8.net. At the account sign-in page, enter the email address and password you used to create the account.)
- B** Press **[talk/flash]**, and dial ****012-0001**. If you do not get a dial tone, see *Configuring the UIP160P for PPPoE or a static IP address* on the next page.
- C** Follow the voice prompts and enter your 10-digit code. You will receive a Registration Confirmation email containing your Packet8 telephone number.
- D** Press **[end]** to hang up.

Configuring the UIP160P for PPPoE or static IP address

If you connected your phone directly to your broadband modem and did not get a dial tone, you might need to configure the phone to use PPPoE (Point to Point Protocol over Ethernet) or a static IP address to connect to your Internet service provider. If you don't have the configuration information, contact your service provider to determine the proper settings for a PPPoE account or a static IP

You might have PPPoE if...


- ▶ You use DSL to connect to the Internet.
- ▶ You enter a user name and password when you connect to the Internet.
- ▶ You use a special program (other than your web browser) to connect to the Internet.

OR You might have static IP if...


- ▶ You made arrangements with your ISP to support a web server, FTP server, bulletin board, mailing list, or other Internet server application on your network.
- ▶ You had to configure an IP address on your PC when you first connected to the Internet.

1 Open the configuration utility

- Connect a computer with a web browser directly to the Ethernet (LAN) port.
- Open a web browser window. Type `http://192.168.88.1` in the address bar and press **Enter**.

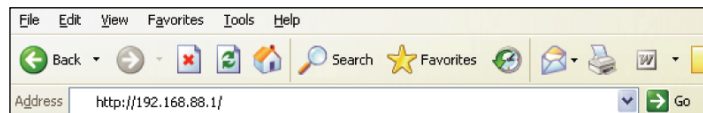


- When the phone prompts you for a password, type `admin` (all lower case) and press **Enter**.
- The first screen you see is the *System Information* screen.

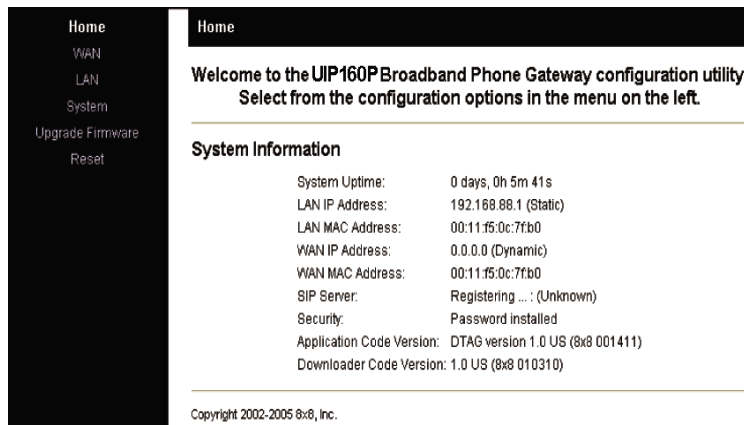A screenshot of the UIP160P configuration utility's System Information screen. The screen has a dark sidebar on the left with a menu containing "Home", "WAN", "LAN", "System", "Upgrade Firmware", and "Reset". The main content area has a title bar "Home" and a welcome message: "Welcome to the UIP160P Broadband Phone Gateway configuration utility. Select from the configuration options in the menu on the left." Below this is a section titled "System Information" with the following details:

System Uptime:	0 days, 0h 5m 41s
LAN IP Address:	192.168.88.1 (Static)
LAN MAC Address:	00:11:f5:0c:7fb0
WAN IP Address:	0.0.0.0 (Dynamic)
WAN MAC Address:	00:11:f5:0c:7fb0
SIP Server:	Registering ...: (Unknown)
Security:	Password installed
Application Code Version:	DTAG version 1.0 US (8x8 001411)
Downloader Code Version:	1.0 US (8x8 010310)


At the bottom of the screen, it says "Copyright 2002-2005 8x8, Inc."

- E** In the menu bar at the left side of the screen, select WAN. This opens the *WAN Status* screen.

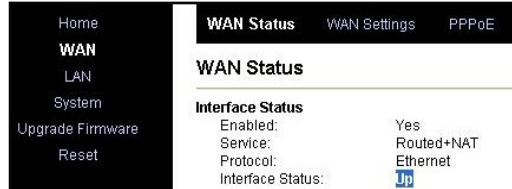

2 Configure for PPPoE


- A** In the menu bar at the top of the screen, select PPPoE. This opens the *WAN PPPoE Configuration* screen.

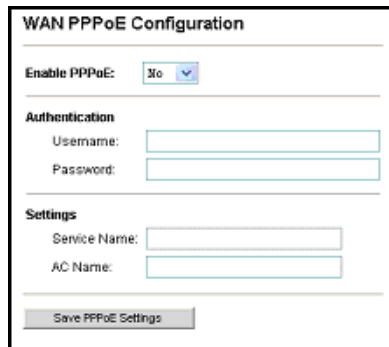

- B** Select Enable PPPoE, and enter the user name and password assigned to you by your ISP.
- C** If your ISP requires it, enter the service name and account name.
- D** Click Save PPPoE Settings.

OR Configure for a static IP

- A** In the menu bar at the top of the screen, select WAN Settings. This opens the *WAN Configuration* screen.

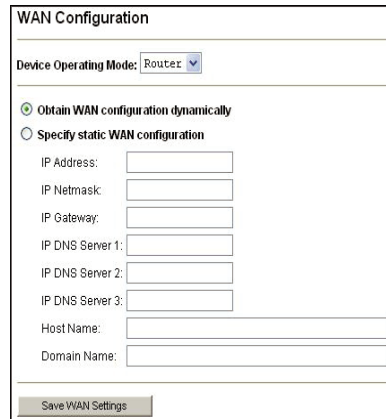

- B** Select the radio button beside Specify static WAN configuration.
- C** Enter your assigned IP Address, Subnet Mask, Gateway, and DNS Servers. If you wish, you can also enter a host name and domain name.
- D** Click Save WAN Settings.

3 Let the UIP160P reboot

You will see a dialog box telling you the UIP160P must reboot to activate the settings. Wait until the LEDs flash three times and the pwr LED stays on. The link LED should come back on in a few seconds. If it does not, make sure your broadband modem is directly connected to the Internet/WAN port, and reboot the UIP160P again.

4 Activate your Packet8 service

Follow the instructions on page 3 to activate your Packet8 service.

Using Your Packet8 Service

Calling using your Packet8 service

- Just like you have always called before - 7 digits for local and 11 digits for long distance.
- To make an international call: Dial IDD (international direct dialing) prefix + country code + phone number.
Examples: Dialing from the U.S. to the U.K.: 011+44+1227 712637
- Anyone can call you using your Packet8 phone number.

Using the Packet8's advanced features

- **Follow Me – Find Me**
This combination hunting and multi-ringing feature allows you to enter up to 5 sets of phone numbers to ring in sequence. This means you can have your Packet8 phone ring first, followed by your work phone and then finally your spouse's work phone - all in a sequence. To activate this feature, go to your account details page after signing in at www.packet8.net.
 - **Simultaneous Ring**
This feature allows you to ring your Packet8 number and any other number(s) you choose simultaneously. To activate this feature, go to your account details page after signing in at www.packet8.net.
 - **7-Digit Dialing**
Packet8 service offers 7-digit dialing to any number within the same area code as your primary Packet8 line. Calls outside of your area code require dialing 1 + area code + phone number. To activate this feature, go to your account details page after signing in at www.packet8.net.
 - **Voicemail with Email Notification**
With this feature, you can choose to receive an email notification with an attached audio file of an actual voice message every time you receive voicemail. To activate this feature, go to your account details page after signing in at www.packet8.net.
 - **Disabling Call Waiting**
You can disable call waiting two easy ways:
 - On a per call basis: Dial *70 before making your call, to disable call waiting for that call. Doing this will send all new callers to voicemail. If voicemail is disabled, callers will simply hear a busy tone while you are on a call.
 - For all calls: To activate this feature, go to your account details page after signing in at www.packet8.net.
-

- **Caller ID**

Caller ID information is automatically displayed whenever it is received.

- **Call Waiting**

If a call comes in when you are on the phone, you will hear a beep.

Press **[talk/flash]** to put the current line on hold and talk to the new caller. Press **[talk/flash]** again to return to the original call.

- **Line Alternate/Hold**

Press **[talk/flash]** to put the current line on hold.

- **Conferencing with two outside callers**

To add a third party to a current phone call, press **[talk/flash]** and call the third party. Press **[talk/flash]** again to conference the two callers together. While in a three-way call, press **[talk/flash]** to disconnect the last person added to the conference.

- **Call Return (*69)**

Dial *69 and stay on the line to automatically call the the last number that called your phone number.

- **Anonymous Call Rejection (*77)**

Dial *77 to reject all incoming calls that have the Caller ID information blocked. To turn off anonymous call rejection, dial *87.

- **Do Not Disturb (*78)**

Dial *77 to send all incoming calls automatically to voicemail, without ringing the phone. To turn off do not disturb, dial *79.

- **Call Forwarding**

You can forward your calls to another number after a certain number of rings.

To activate this feature, go to your account details page after signing in at www.packet8.net.

NOTE: Packet8 offers Enhanced 911 calling as a standard feature of its Internet phone service. However, there are certain circumstances when you dial 911 from a phone connected to the Packet8 service where E911 service may not be available, or the E911 service may be in some way limited in comparison to traditional 911 service. Please review the Terms and Conditions at www.packet8.net for additional information.

Voice quality and reliability may vary depending on your VoIP service provider's network and your broadband ISP connectivity.

Using Your Packet8 Voicemail

▶ Using Voicemail on your Packet8 service

▶ To check your Packet8 voicemail:

- From your Packet8 phone: Dial your Packet8 phone number or **012-0555; when prompted enter your password. *(The default password is 0000.)*
- From any phone in or outside of the U.S., dial your Packet8 phone number; when your own voice message plays, press the “#” key then follow the prompt to enter your password. *(The default password is 0000.)*

 
▶ If you have a message waiting, you can press:

▶ There are two ways of changing your voicemail settings, voicemail password, # of rings, and call settings:

1 Access your account details page after signing in at www.packet8.net

2 Call from your Packet8 phone: Dial your Packet8 phone number; when prompted enter your password. *(The default password is 0000.)*

- **1** Next message
- **2** Replay message
- **3** Delete message
- **4** Save messages and listen to the next

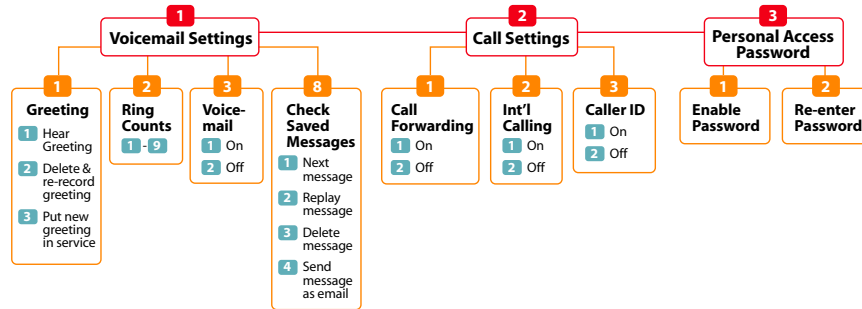

Packet8 Contact Information:

- Automated Activation Service: **012-0001
- Automated IP Address/Phone Number Service: **012-0003
- Packet8 Voicemail: Dial your Packet8 phone number or **012-0555

Support:

- www.packet8.net/support
- Email: technicalsupport@packet8.net
- Customer Service, toll-free: 1.888.898.8733
- Customer Service, outside U.S.: 1.408.687.4120



3151 Jay Street
 Santa Clara, CA U.S.A. 95054
 Tel: 408.727.1885 • Fax: 408.980.0432
www.packet8.net
community.packet8.net

Packet8, the Packet8 logo, and the 8x8, Inc. logo are registered trademarks of 8x8, Inc. 8x8, Inc. is a Nasdaq listed company, symbol EGHY.